



WIRING DIAGRAM FOR SINGLE OR MULTIPLE REMOTE CONTROLLED RF BLINDS

motor which may be mounted either on the RH or LH side

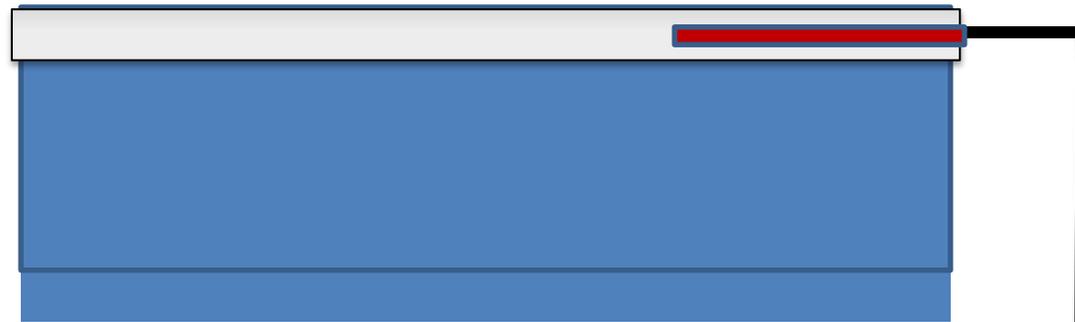

The Sonesse 40 motor range is Class 2 rated - no earth required

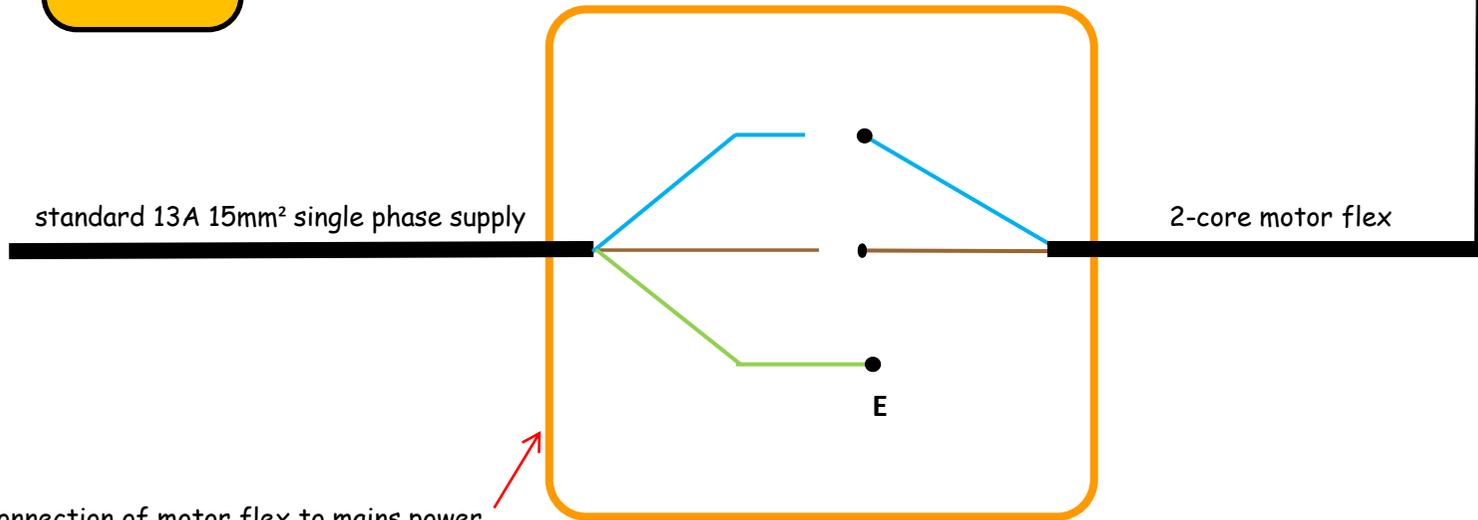

connection of motor flex to mains power (e.g. 'Klix' socket, spur unit, etc.)

Diagram based on using Somfy motors

Standard configuration Somfy® RF Radio Controlled Motor with either Remote Control or Smoove® battery operated wall switch

NOTES

Max length of motor flex is 2.5m

For multiple blinds pair 1 blind to the motor and then turn off the power to that blind.

Then programme the other blind to it's remote control.

Only then can you power on blind one again. Failure to do this could cause problems with blind one's motor.

DRAWING TITLE

Simplified schematic wiring diagram for radio blinds

DRAWING NO.

DRAWN BY

DATE

SCALE

N.T.S