


Measuring For Openview Blinds On An Angle




SKYLIGHTBLINDS
DIRECT

Honeycomb Openview Blinds Can Be Fitted On Any Angle

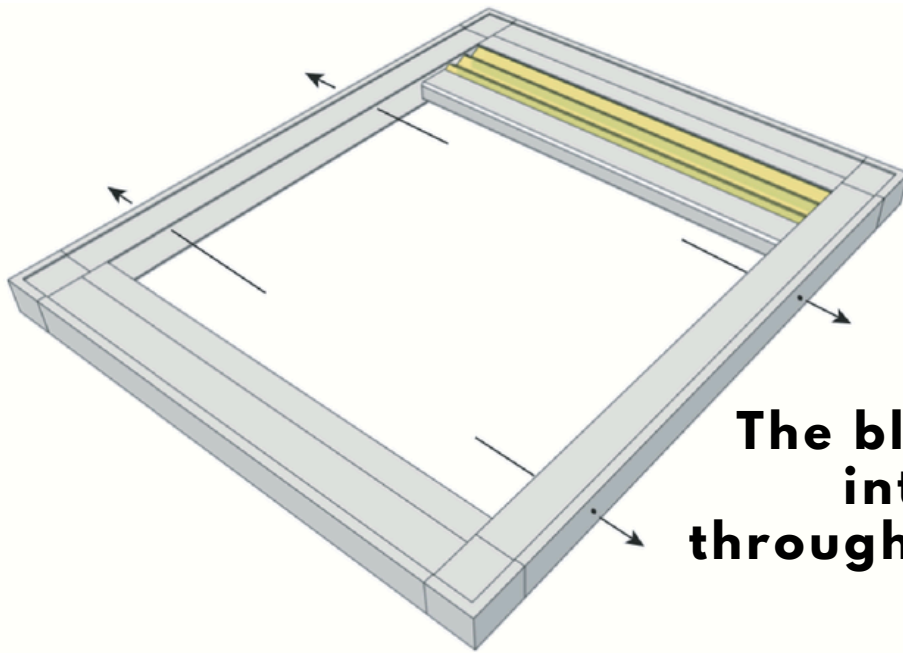

**The blind is side fixed
into the walls
through the side channels**

Fig 1

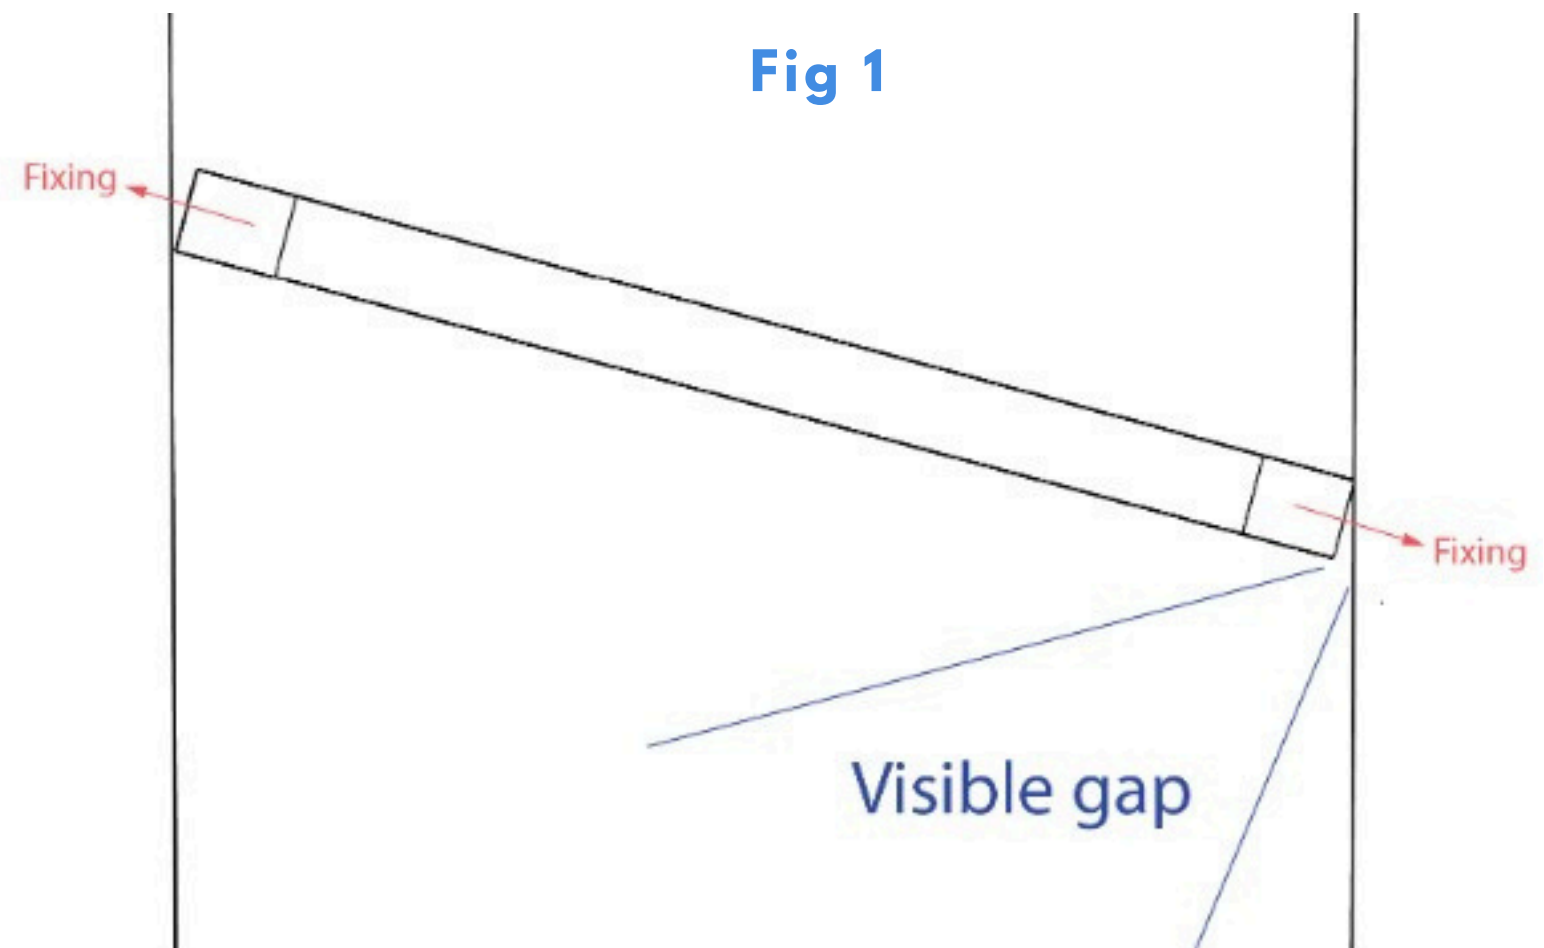

The blinds have pre drilled holes down the side channels and the blind has square edges so fixing screws will be visible on at least one side

Step 1

To measure for this type of window you should measure down from the glass an equal distance on each side eg 20cm down from the top of the glass on the left and the right.


Step 2

Then measure accurately the distance between these 2 points as indicated by the red line on the fig 2 (give us 3 x widths for each blind in mm) & 3 x lengths

Step 3

Then measure the angle at the point shown in fig 2

Fig 2

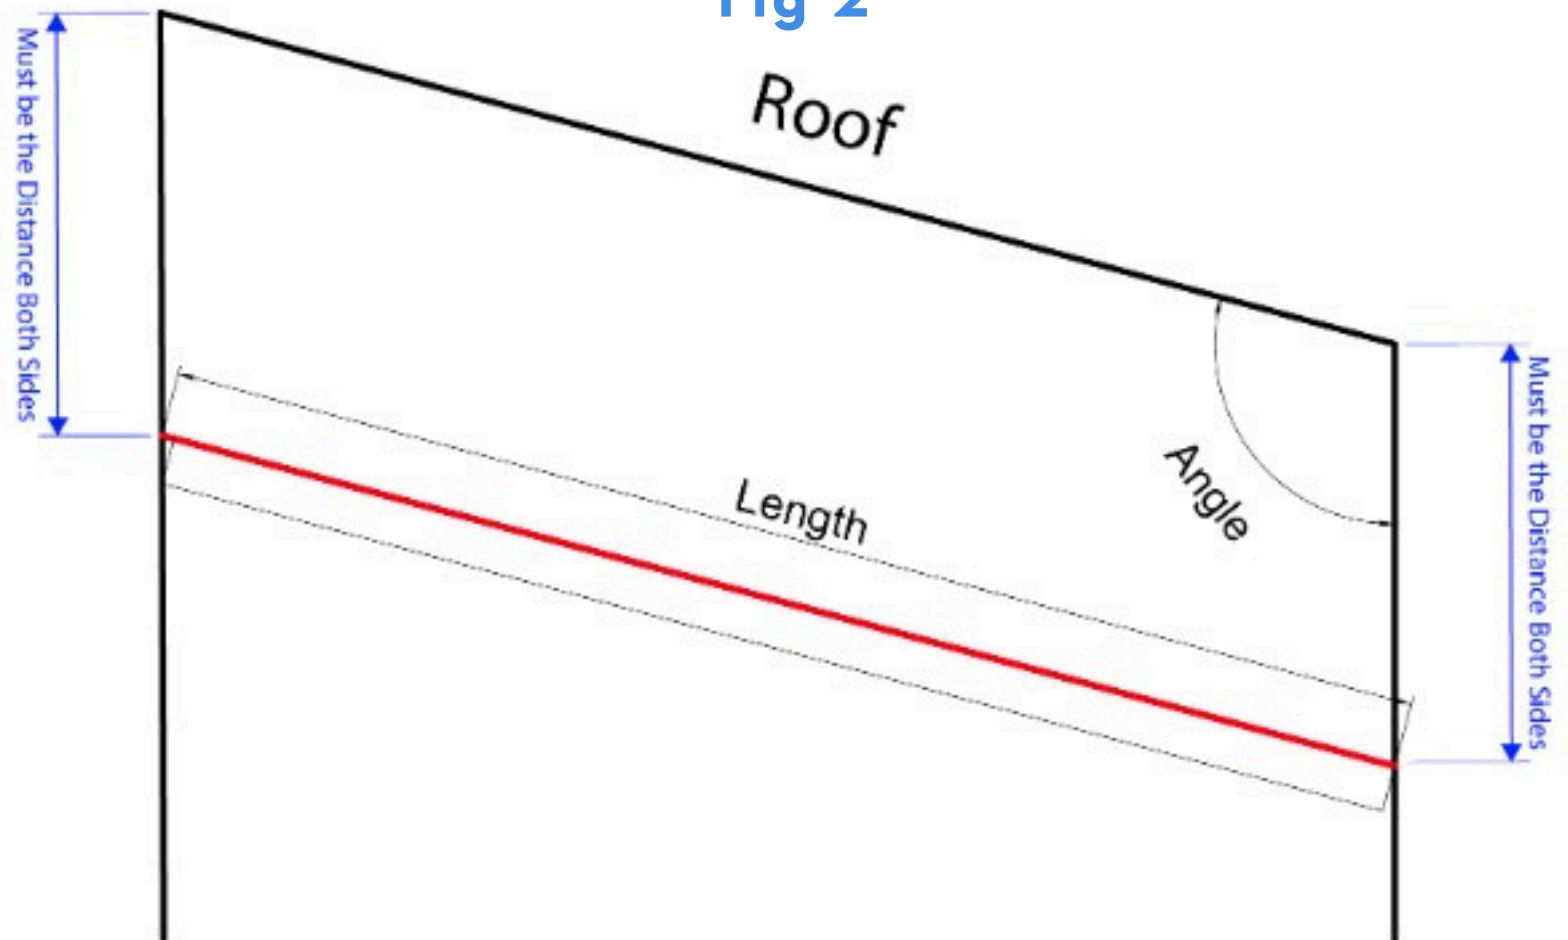

Finishing Touches

Bear in mind when you come round to fitting your blind you will see the screws on at least one side of the blind (where the blind is fixed into the walls - this can be hidden by battons or trim - we have found this to be a very good trim which is available online from B&Q [B&Q Flexible Trim](#)

**White UPVC Plastic Flexible Angle Trim 25mm x
25mm x 5 Metre Length**

